
Hoop II Multi-Mount Step Installation Instructions

Part No's: 101241-1 / 101242-1

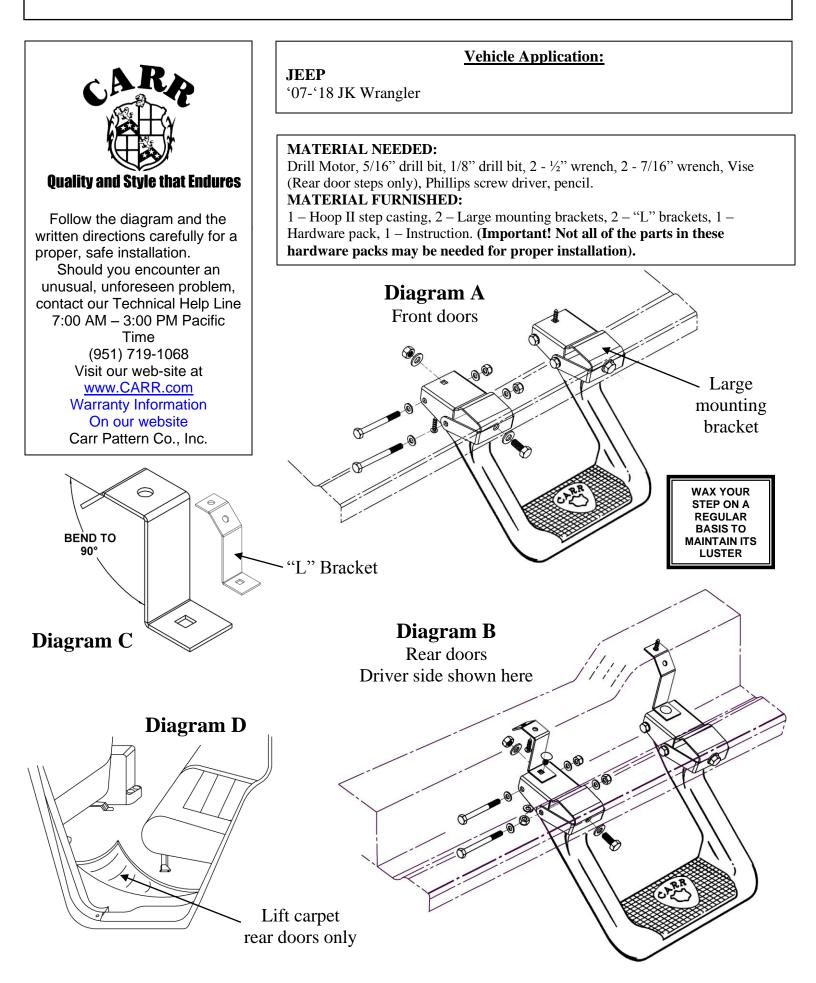





WARNINGS!

- \checkmark Do not over tighten the nuts and bolts or damage to the castings and or stripping of the threads could result.
- ✓ FOR SAFE AND PROPER USAGE OF THIS PRODUCT, THE MOUNTING INSTRUCTIONS MUST BE FOLLOWED CAREFULLY AND COMPLETELY.
- The manufacturer and distributor of this product are in no way responsible for the consumer's failure to adhere to the warnings and directions of these instructions in the event of damage to the consumer's vehicle, other properties and or personal injury.

For front doors:

- 1. For the proper position of the step, the front edge of the seat while in normal driving position should be in line with the center of the step. For personal preference or to avoid any obstruction underneath body metal, step can be moved left or right.
- 2. Assemble the steel brackets to the step as shown in the Diagram A, and securely tighten.
- 3. When positioning the step against the body metal, be sure to avoid all bumps and screws to make sure that the step assembly is against a flat surface.
- 4. When the desired location is found, while holding the step in that position, take a short pencil and mark through the hole located in the front of each large mounting bracket onto the body metal.
- 5. Center punch the marked hole
- 6. Take a 1/8" drill bit and drill out the centered punched holes.
- 7. Replace the 1/8" drill bit and drill out the 1/8" hole for the marked 5/16" hole with a 5/16" drill bit.
- 8. After drilling, make sure that all the burrs are removed.
- 9. Place the large mounting brackets only back on the vehicle where the holes are drilled.
- 10. Take the 5/16" hardware that is provided and hand-tighten both large mounting brackets to the vehicle.
- 11. Take a 1/8" drill bit and drill two more holes through the square holes that are located on each large mounting bracket.
- 12. Take the sheet metal screws provided and securely tighten.

13. Place the step back into the large mounting brackets as shown in Diagram A and securely tighten all hardware. For rear doors:

- 1. Follow steps 1 10 from above front door instructions.
- 2. Take one "L" Bracket (See Diagram C) and bend it to a 90 degree angle as shown in Diagram C. (use a vise to bend the bracket).
- Securely fastener both the "L" brackets, one with the 90 degree bend and one without it to the Large mounting brackets. See Diagram B. IMPORTANT: Be sure that the "L" Bracket with the 90 degree bend is the "L" Bracket that is closer to the step mounted to the front door.
- 4. CAUTION: Before drilling the holes in step 3, make sure you lift the carpet and padding up out of the way in the area where you will be drilling so damage to the carpet does not occur. See Diagram D.
- 5. Take a 1/8" drill bit and drill through the holes in each "L" Bracket into the body metal.
- 6. Take the sheet metal screws provided and securely tighten.
- 7. Repeat all the above for the other side of your vehicle.
- 8. Make sure all hardware is securely tightened and that all the directions of this instruction have been followed carefully and completely, otherwise product failure could occur.

Carr Pattern Co., Inc. Warranty Policy	
Finishes: Limited Lifetime	
Structural Warranty: Limited Lifetime	
Warranty Conditions:	
a. All warranties start from consumer's date of purchase.	
b. A new product will be sent out immediately to replace a warranty claim.	
c. The above guidelines apply only to the Original Purchaser.	
d. Original proof of purchase must be submitted for all warranty and returns issues.	
Warranty Limitations:	
a. Warranty coverage extends ONLY to repair or replacement of the CARR product. This warranty does not cover the cost of labor, transportation, installation or removal of the product.	
b. Warranty coverage does not extend to damage caused by: collision, fire, theft, freezing, vandalism, riot, explosion or object striking the product, or misuse of the product and/or the vehicle on	
which the product is being installed.	
c. Warranty coverage does not extend to damage caused by: airborne fallout (chemicals, tree sap, etc.), stones, hail, earthquake, water or flood, windstorm, lightning, the application of chemicals or	
sealants subsequent to manufacture.	
d. Warranty coverage does not extend to damages caused by: normal wear and tear, abuse, modification or improper installation of the product. e. Warranty coverage does not extend to any economic loss or extra expense including (without limitation), payment for the loss of time or pay, inconvenience, storage, loss of vehicle use, vehicle	
e. waitany coverage does not extend to any economic toss of extra expense including (windout minitation), payment for the loss of time of pay, inconvenience, storage, loss of venicle use, venicle rental expense, equipment rental expense, lodging, meals, or other travel costs.	
Other Terms:	
This warranty gives you specific legal rights and you may also have other rights that vary from state to state. CARR does not authorize any person to create for it any other obligation or liability in	
connection with its products. ANY IMPLED WARANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO THIS PRODUCT IS LIMITED IN	
Connection with its products. All it in Eleb which it is indicated in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the structure in the structure in the structure is structure in the stru	- 1

CONNECTION WITH ITS PTODUCTS. ANY IMPLIED WARKANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WRITTEN WARRANTY. PERFORMANCE OF REPAIRS AND NEEDED ADJUSTMENTS IS THE EXCULSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY. CARR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM BREACH OF THIS WRITTEN WARRANTY.*

apply to you. Guarantee: Every attempt has been made to manufacture and distribute the finest quality products available. Our manufactured products are guaranteed to be free of defects due to workmanship or materials. Distributed products are subject to manufacturer's warranty only.

^{*}Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages, so that above limitations or exclusions may not