

TESTED • TRUSTED • TOUGH



2021

ACCESSORIES CATALOG

OFF-ROAD | TRUCKS | SPECIALTY | INDUSTRIAL | COMMERCIAL



TABLE OF CONTENTS

**American Manufactured
Since 1945**

-

**Never Compromise
On Quality Or Safety**

-

Engineered For Durability & Strength

-

Easy Installation

-

**Ease Of Use,
Even In The Most Demanding
Conditions**

-

**Rugged Designs Give Your
Vehicle A Unique Personal
Style And Appeal**

-

With Carr, Safety Can Be Simple

-

**Built-In Innovation
To Enhance Operator Safety
And Productivity While
On The Job**

■ TABLE OF CONTENTS

NEW PRODUCTS.....2

LD STEP.....3-4

SUPER HOOP5-6

HOOP II7-8

WORK TRUCK STEPS.....9-10

CARGO VAN STEPS10

FACTORY STEP11

GRAB HANDLES11

HD HITCH STEP12

MEGA STEPS.....13

HD MEGA STEPS13

JL 180° LIGHT MOUNT.....14

LIGHT WING.....14

XRS JEEP ROTA LIGHT BAR15

LIGHT BARS15-20

COMMERCIAL/FLEET/INDUSTRIAL.....21

FIRE/EMERGENCY22

TERMS AND CONDITIONS22

- **Do the right thing**
- **At the right time**
- **In the right way**
- **For the right reason**

With over 76 years of manufacturing excellence, CARR is a third-generation business that remains firmly committed to serving you and your team members.






NEW WORK TRUCK STEPS


- Hands-free
- Fully assembled
- When in the “out” position, both feet fit on the step
- Large non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push on step to deploy, push back in again to lock when not in use!

INNOVATIVE DESIGN OVERCOMES CHASSIS LIMITATIONS

NEW 16" WORK TRUCK STEP

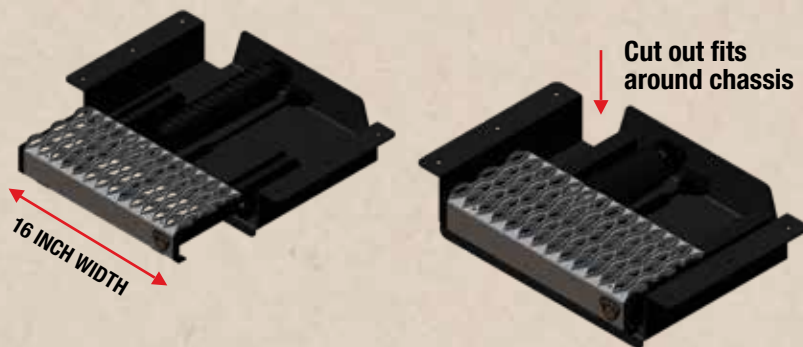


NEW 24" EXTENDED DEPLOYABLE PLATFORM

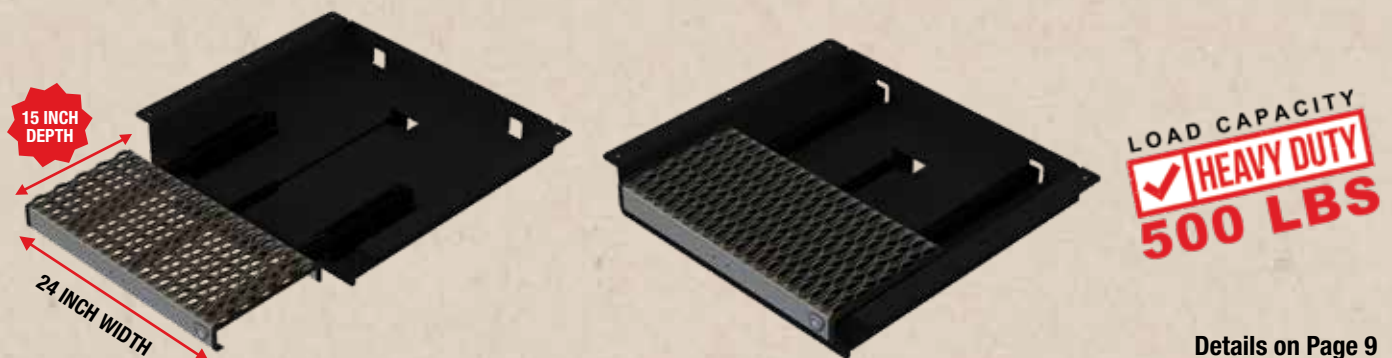

Details on Page 9



LD STEP

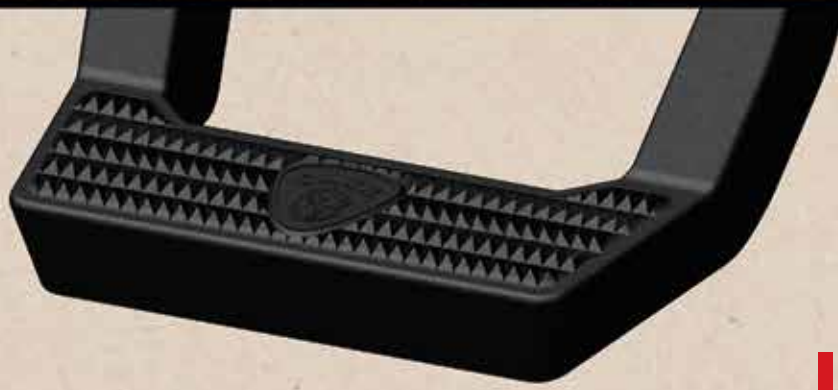

LD STEP

The LD step was actually inspired by Jeff Carr’s wife, Lynn. Hence the name “LD Step” (Lynn’s Design). This step gives the user easier access to the vehicle due to the wider and deeper stepping surface that extends further than our other steps. The LD step is available in our three durable finishes, and installation is a cinch with our mounting system.



XM3

POLISHED

CARR’s Xtreme Mechanical Polished finish won’t rust, crack or peel and requires very little maintenance.



XP3

BLACK

CARR’s Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP7

SAFETY YELLOW

CARR’s Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.


FEATURES

- Easier entry and exit from your vehicle
- 14” wide functional step area
- Extends further than our current steps
- Made of corrosion-resistant, durable cast aluminum alloy for extreme longevity
- NEW aggressive and appealing tread design for a non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design that enhances the looks of current vehicle body styles
- Limited lifetime warranty on materials and craftsmanship

DIMENSION: 14” width

STEP PAD: Aggressive and appealing tread design for a non-slip surface

STEP: Flat step area for increased safety

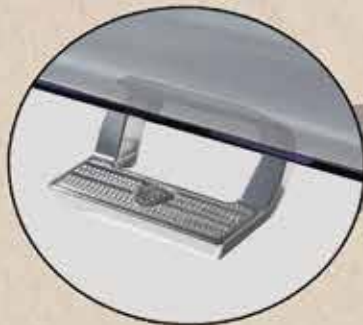

LD STEP APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'15 - '21 Colorado/Canyon	113332	113331	113337
'02 - '09 Trail Blazer/Envoy	114032	114031	114037
'02 - '13 Avalanche	114032	114031	114037
'02 - '21 Denali Truck	114032	114031	114037
'20 - '21 Sierra/Silverado 2500-3500 C&K P/U/Fullsize/All Cabs All Doors (GAS AND DIESEL)	113332	113331	113337
'19 - '21 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	113332	113331	113337
'88 - '19 Sierra/Silverado 1500 C&K P/U / Fullsize / All Cabs / All doors - 2018 Body Style/Light Duty	114032	114031	114037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	114032	114031	114037
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	116332	116331	116337
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	114032	114031	114037
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	114032	114031	114037
'76 - '91 Suburban	114032	114031	114037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	114032	114031	114037
'67 - '96 Fullsize Van	114032	114031	114037
RAM/DODGE			
'19 - '21 Ram GAS 1500 NEW BODY STYLE	119112	119111	119117
'09 - '21 Ram GAS 1500-5500 CLASSIC BODY STYLE	119772	119771	119777
'09 - '21 Ram DIESEL 2500-5500 P/U beds only	119772	119771	119777
'11 - '21 * Ram DIESEL 3500-5500 Chassis beds only	117442	117441	117447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	119772	119771	119777
'94 - '08 Ram 1500-5500	114032	114031	114037
'74 - '93 Fullsize P/U	114032	114031	114037
'97 - '09 Dakota 2-Door Only	114032	114031	114037
'02 - '06 Sprinter Van	114502	114501	114507
'07 - '09 Sprinter Van	115772	115771	115777
'74 - '92 Ram Charger	114032	114031	114037
'83 - '91 Raider	114032	114031	114037
FORD/MERCURY			
'17 - '21 Super Duty Aluminum body F250 - F550 DOES NOT FIT F550 standard/single cabs	118222	118221	118227
'99 - '16 Super Duty All Cabs (All Doors)	114872	114871	114877
'15 - '21 F-150 Aluminum body All door/All cabs	118222	118221	118227
'04 - '14 F-150 All Cabs (All Doors)	114032	114031	114037
'01 - '03 F150 SuperCrew (All Doors)	114032	114031	114037
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	114032	114031	114037
'97 - '03 F-150 Quad Cab (All Doors)	114032	114031	114037
'19 - '21 Ranger Super Crew - 4 door	114502	114501	114507
'19 - '21 Ranger Super Cab - Front doors only	114502	114501	114507
'98 - '11 Ranger 2-Door Only - No Ext.Cab	114992	114991	114997
'00 - '05 Excursion (All Doors)	114872	114871	114877
'18 - '21 Expedition (All Doors)	118222	118221	118227
'97 - '17 Expedition (All Doors)	114032	114031	114037
'91 - '01 Explorer (not Eddie Bauer)	114032	114031	114037
'96 - '01 Mercury Mountaineer	114032	114031	114037
'75½ - '02 Fullsize E-Series Van	114032	114031	114037
'05 - '14 Fullsize E-Series Van	114032	114031	114037
'15 - '21 E-Series Cutaway Cab	114032	114031	114037

ISUZU	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	114032	114031	114037
'91 - '02 Rodeo	114032	114031	114037
'91 - '02 Amigo	114032	114031	114037
'89 - '93 P/U	114032	114031	114037
JEEP			
'06 - '10 Commander	114502	114501	114507
'18 - '21 JL Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	111252	111251	N/A
'07 - '18 JK Wrangler (Front doors only, all styles)	111142	111141	111147
'97 - '06 TJ Wrangler	110552	110551	110557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	114502	114501	114507
'93 - '98 Grand Cherokee	114032	114031	114037
MAZDA			
'91 - '94 Navajo	114032	114031	114037
'98 - '11 B-Series P/U 2-Door Only	114992	114991	114997
'83 - '93 B-Series P/U	114032	114031	114037
MERCEDES			
'10 - '21 Sprinter Van	115772	115771	115777
MITSUBISHI			
'78 - '94 P/U	114032	114031	114037
'83 - '99 Montero	114032	114031	114037
'97 - '02 Montero Sport	114032	114031	114037
NISSAN			
'98 - '01 Frontier Reg cab	114032	114031	114037
'02 - '21 Frontier (All Cabs)	114032	114031	114037
'00 - '16 Xterra (Front doors)	114032	114031	114037
'86 - '01 Pathfinder	114032	114031	114037
'86 - '97 Hardbody P/U	114032	114031	114037
'72 - '86 P/U	114032	114031	114037
TOYOTA			
'05 - '21 Tacoma Crew Cab (All Doors)	114502	114501	114507
'01 - '04 Tacoma Crew Cab (All Doors)	114032	114031	114037
'05 - '21 Tacoma / Prerunner	114502	114501	114507
'96 - '04 Tacoma / Prerunner	114032	114031	114037
'00 - '21 Tundra	114502	114501	114507
'01 - '07 Sequoia	114502	114501	114507
'74 - '95 P/U	114032	114031	114037
'05 - '09 4 Runner	114502	114501	114507
'84 - '04 4 Runner	114032	114031	114037
'91 - '98 FJ80 Land Cruiser	114032	114031	114037
'80 - '91½ FJ60/FJ62 L/C	114032	114031	114037
'07 - '14 FJ Cruiser	114502	114501	114507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



SUPER HOOP



■ SUPER HOOP

The stylish and innovative design of these steps adds to a vehicle's rugged off-road look. Available in three low-maintenance, extremely durable finishes. This step is made to compliment your vehicle's appearance and is easily installed with our multi-mount system for superior strength and rigidity.

FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship



XM3

POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



XP3

BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP7

SAFETY YELLOW

CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.

DIMENSION: Large 20" width

STEP PAD: Exclusive diamond, nonslip tread pattern

STEP: Flat step area for increased safety



SUPER HOOP APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'15 - '21 Colorado/Canyon	123332	123331	123337
'02 - '09 Trail Blazer/Envoy	124032	124031	124037
'02 - '13 Avalanche	124032	124031	124037
'02 - '21 Denali Truck	124032	124031	124037
'20 - '21 Sierra/Silverado 2500-3500 C&K P/U/Fullsize all cabs All doors (GAS AND DIESEL)	123332	123331	123337
'19 - '21 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	123332	123331	123337
'88 - '19 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors) 2018 Body Style/Light Duty	124032	124031	124037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	124032	124031	124037
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	126332	126331	126337
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	124032	124031	124037
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	124032	124031	124037
'76 - '91 Suburban	124032	124031	124037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	124032	124031	124037
'67 - '96 Fullsize Van	124032	124031	124037
RAM/DODGE			
'19 - '21 Ram GAS 1500 NEW BODY STYLE	129112	129111	129117
'09 - '21 Ram GAS 1500-5500 CLASSIC BODY STYLE	129772	129771	129777
'09 - '21 Ram DIESEL 2500-5500 P/U beds only	129772	129771	129777
'11 - '21 * Ram DIESEL 3500-5500 Chassis beds only	127442	127441	127447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	129772	129771	129777
'94 - '08 Ram 1500-5500	124032	124031	124037
'74 - '93 Fullsize P/U	124032	124031	124037
'97 - '09 Dakota 2-Door Only	124032	124031	124037
'02 - '06 Sprinter Van	124502	124501	124507
'07 - '09 Sprinter Van	125772	125771	125777
'74 - '92 Ram Charger	124032	124031	124037
'83 - '91 Raider	124032	124031	124037
FORD/MERCURY			
'17 - '21 Super Duty Aluminum body F250 - F550 DOES NOT FIT F550 standard/single cabs	128222	128221	128227
'99 - '16 Super Duty All Cabs (All Doors)	124872	124871	124877
'15 - '21 F-150 Aluminum body All door/All cabs	128222	128221	128227
'04 - '14 F-150 All Cabs (All Doors)	124032	124031	124037
'01 - '03 F150 SuperCrew (All Doors)	124032	124031	124037
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	124032	124031	124037
'97 - '03 F-150 Quad Cab (All Doors)	124032	124031	124037
'81 - '96 F150 & 250 Light Duty P/U/Bronco All Doors/All Cabs	120252	120251	120257
'81 - '98 F250-550 Heavy Duty P/U All Doors/All Cabs	120252	120251	120257
'19 - '21 Ranger Super Crew - 4 door	124502	124501	124507
'19 - '21 Ranger Super Cab - Front doors only	124502	124501	124507
'98 - '11 Ranger 2-Door Only - No Ext.Cab	124992	124991	124997
'00 - '05 Excursion (All Doors)	124872	124871	124877
'18 - '21 Expedition (All Doors)	128222	128221	128227
'97 - '17 Expedition (All Doors)	124032	124031	124037
'91 - '01 Explorer (not Eddie Bauer)	124032	124031	124037
'96 - '01 Mercury Mountaineer	124032	124031	124037
'95 - '96 F150 Lightning	120252	120251	120257
'75½ - '02 Fullsize E-Series Van	124032	124031	124037
'05 - '14 Fullsize E-Series Van	124032	124031	124037
'15 - '21 E-Series Cutaway Cab	124032	124031	124037
NO-DRILL APPLICATION '99-'16 Super Duty (All Cabs/All Doors)	125002	125001	125007

ISUZU	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	124032	124031	124037
'91 - '02 Rodeo	124032	124031	124037
'91 - '02 Amigo	124032	124031	124037
'89 - '93 P/U	124032	124031	124037
JEEP			
'06 - '10 Commander	124502	124501	124507
'07 - '18 JK Wrangler (Front doors only, all styles)	121242	121241	121247
'97 - '06 TJ Wrangler	120552	120551	120557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	124502	124501	124507
'93 - '98 Grand Cherokee	124032	124031	124037
MAZDA			
'91 - '94 Navajo	124032	124031	124037
'98 - '11 B-Series P/U 2-Door Only	124992	124991	124997
'83 - '93 B-Series P/U	124032	124031	124037
MERCEDES			
'10 - '21 Sprinter Van	125772	125771	125777
MITSUBISHI			
'78 - '94 P/U	124032	124031	124037
'83 - '99 Montero	124032	124031	124037
'97 - '02 Montero Sport	124032	124031	124037
NISSAN			
'98 - '01 Frontier Reg cab	124032	124031	124037
'02 - '21 Frontier (All Cabs)	124032	124031	124037
'00 - '16 Xterra (Front doors)	124032	124031	124037
'86 - '01 Pathfinder	124032	124031	124037
'86 - '97 Hardbody P/U	124032	124031	124037
'72 - '86 P/U	124032	124031	124037
TOYOTA			
'05 - '21 Tacoma Crew Cab (All Doors)	124502	124501	124507
'01 - '04 Tacoma Crew Cab (All Doors)	124032	124031	124037
'05 - '21 Tacoma / Prerunner	124502	124501	124507
'96 - '04 Tacoma / Prerunner	124032	124031	124037
'00 - '21 Tundra	124502	124501	124507
'01 - '07 Sequoia	124502	124501	124507
'74 - '95 P/U	124032	124031	124037
'05 - '09 4 Runner	124502	124501	124507
'84 - '04 4 Runner	124032	124031	124037
'91 - '98 FJ80 Land Cruiser	124032	124031	124037
'80 - '91½ FJ60/FJ62 L/C	124032	124031	124037
'07 - '14 FJ Cruiser	124502	124501	124507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



HOOP II



■ HOOP II

This uniquely designed diamond tread pattern provides a safe, non-slip surface on the flat step area. Our exclusive multi-mount system is designed for a precision fit and easier installation. The Hoop II step is constructed from extremely strong die-cast aluminum alloy for maximum quality and durability.



FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides one of the strongest and easiest installations on the market
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship



POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



SAFETY YELLOW

CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.

DIMENSION:	Compact 10" width
STEP PAD:	Exclusive diamond, non-slip tread pattern
STEP:	Flat step area for increased safety



HOOP II APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'15 - '21 Colorado/Canyon	103332	103331	103337
'02 - '09 Trail Blazer/Envoy	103992	103991	103997
'02 - '13 Avalanche	103992	103991	103997
'02 - '21 Denali Truck	103992	103991	103997
'20 - '21 Sierra/Silverado 2500-3500 C&K P/U/Fullsize all cabs All doors (GAS AND DIESEL)	103332	103331	103337
'19 - '21 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	103332	103331	103337
'88 - '19 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors) - 2018 Body Style/Light Duty	103992	103991	103997
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	103992	103991	103997
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	106332	106331	106337
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	103992	103991	103997
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	103992	103991	103997
'76 - '91 Suburban	103992	103991	103997
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	103992	103991	103997
'67 - '96 Fullsize Van	103992	103991	103997
RAM/DODGE			
'19 - '21 Ram GAS 1500 NEW BODY STYLE	109112	109111	109117
'09 - '21 Ram GAS 1500-5500 CLASSIC BODY STYLE	109772	109771	109777
'09 - '21 Ram DIESEL 2500-5500 P/U beds only	109772	109771	109777
'11 - '21 * Ram DIESEL 3500-5500 Chassis beds only	107442	107441	107447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	109772	109771	109777
'94 - '08 Ram 1500-5500	103992	103991	103997
'74 - '93 Fullsize P/U	103992	103991	103997
'97 - '09 Dakota 2-Door Only	103992	103991	103997
'14 - '21 ProMaster Van - Front doors only	105772	105771	105777
'02 - '06 Sprinter Van	104502	104501	104507
'07 - '09 Sprinter Van	105772	105771	105777
'74 - '92 Ram Charger	103992	103991	103997
'83 - '91 Raider	103992	103991	103997
FORD/MERCURY			
'17 - '21 Super Duty Aluminum body F250 - F550 DOES NOT FIT F550 standard/single cabs	108222	108221	108227
'99 - '16 Super Duty All Cabs (All Doors)	104812	104811	104817
'15 - '21 F-150 Aluminum body All door/All cabs	108222	108221	108227
'04 - '14 F-150 All Cabs (All Doors)	103992	103991	103997
'01 - '03 F150 SuperCrew (All Doors)	103992	103991	103997
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	103992	103991	103997
'97 - '03 F-150 Quad Cab (All Doors)	103992	103991	103997
'81 - '96 F150 & 250 Light Duty/P/U/Bronco All Doors/All Cabs	102522	102521	102527
'81 - '98 F250-550 Heavy Duty P/U All Doors/All Cabs	102522	102521	102527
'19 - '21 Ranger Super Crew - 4 door	104502	104501	104507
'19 - '21 Ranger Super Cab - 4 door	104502	104501	104507
'19 - '21 Ranger Super Cab - Front doors only	104502	104501	104507
'98 - '11 Ranger 2-Door Only - No Ext. Cab	104992	104991	104997
'00 - '05 Excursion (All Doors)	104812	104811	104817
'18 - '21 Expedition (All Doors)	108222	108221	108227
'97 - '17 Expedition (All Doors)	103992	103991	103997
'91 - '01 Explorer (not Eddie Bauer)	103992	103991	103997
'96 - '01 Mercury Mountaineer	103992	103991	103997
'95 - '96 F150 Lightning	102522	102521	102527
'75½ - '02 Fullsize E-Series Van	103992	103991	103997
'05 - '14 Fullsize E-Series Van	103992	103991	103997
'15 - '21 E-Series Cutaway Cab	103992	103991	103997

ISUZU	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	103992	103991	103997
'91 - '02 Rodeo	103992	103991	103997
'91 - '02 Amigo	103992	103991	103997
'89 - '93 P/U	103992	103991	103997
JEEP			
'06 - '10 Commander	104502	104501	104507
'18 - '21 JL Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	101252	101251	N/A
'07 - '18 JK Wrangler (All doors, all styles)	101242	101241	101247
'07 - '18 JK Wrangler (Front doors only, all styles)	101242	101241	101247
'97 - '06 TJ Wrangler	102552	102551	102557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	104502	104501	104507
'93 - '98 Grand Cherokee	103992	103991	103997
MAZDA			
'91 - '94 Navajo	103992	103991	103997
'98 - '11 B-Series P/U 2-Door Only	104992	104991	104997
'83 - '93 B-Series P/U	103992	103991	103997
MERCEDES			
'10 - '21 Sprinter Van	105772	105771	105777
MITSUBISHI			
'78 - '94 P/U	103992	103991	103997
'83 - '99 Montero	103992	103991	103997
'97 - '02 Montero Sport	103992	103991	103997
NISSAN			
'98 - '01 Frontier Reg cab	103992	103991	103997
'02 - '21 Frontier (All Cabs)	103992	103991	103997
'00 - '16 Xterra (Front doors)	103992	103991	103997
'00 - '16 Xterra (Rear doors)	103992	103991	103997
'86 - '01 Pathfinder	103992	103991	103997
'86 - '97 Hardbody P/U	103992	103991	103997
'72 - '86 P/U	103992	103991	103997
TOYOTA			
'05 - '21 Tacoma Crew Cab (All Doors)	104502	104501	104507
'01 - '04 Tacoma Crew Cab (All Doors)	103992	103991	103997
'05 - '21 Tacoma / Prerunner	104502	104501	104507
'96 - '04 Tacoma / Prerunner	103992	103991	103997
'00 - '21 Tundra	104502	104501	104507
'01 - '07 Sequoia	104502	104501	104507
'74 - '95 P/U	103992	103991	103997
'05 - '09 4 Runner	104502	104501	104507
'84 - '04 4 Runner	103992	103991	103997
'91 - '98 FJ80 Land Cruiser	103992	103991	103997
'80 - '91½ FJ60/FJ62 L/C	103992	103991	103997
'07 - '14 FJ Cruiser	104502	104501	104507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



WORK TRUCK STEP





WORK TRUCK STEP

Gives safe and easy access to the side and top rack of any service truck where exterior tool boxes are used.

FEATURES

- Hands-free
- Fully assembled
- 500 lb. weight capacity
- Easy to install and easy to use
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on the step
- Large 31", 24" or 12" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push on step to deploy, push back in again to lock when not in use!

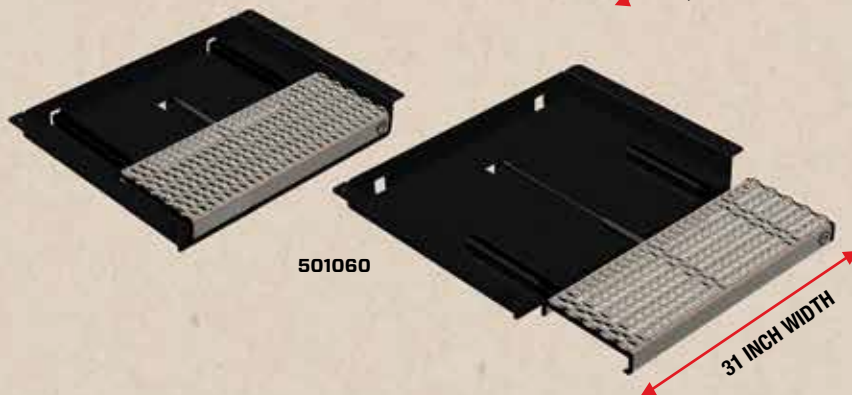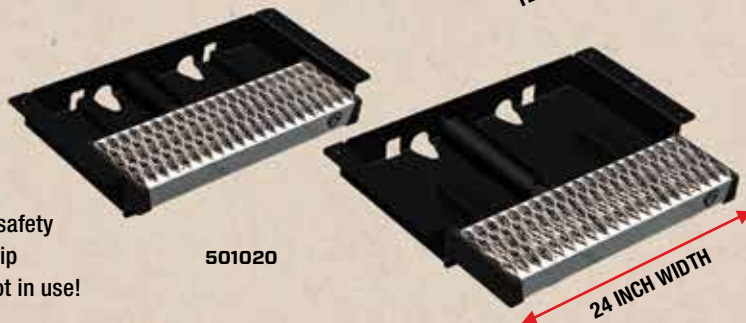


LOAD CAPACITY
✓ HEAVY DUTY
500 LBS

HEAVY-DUTY AND HANDS-FREE
DEPLOY AND CLOSE WITH YOUR FEET



WORK TRUCK STEP

CARGO VAN STEP (REAR AND SIDE DOORS)

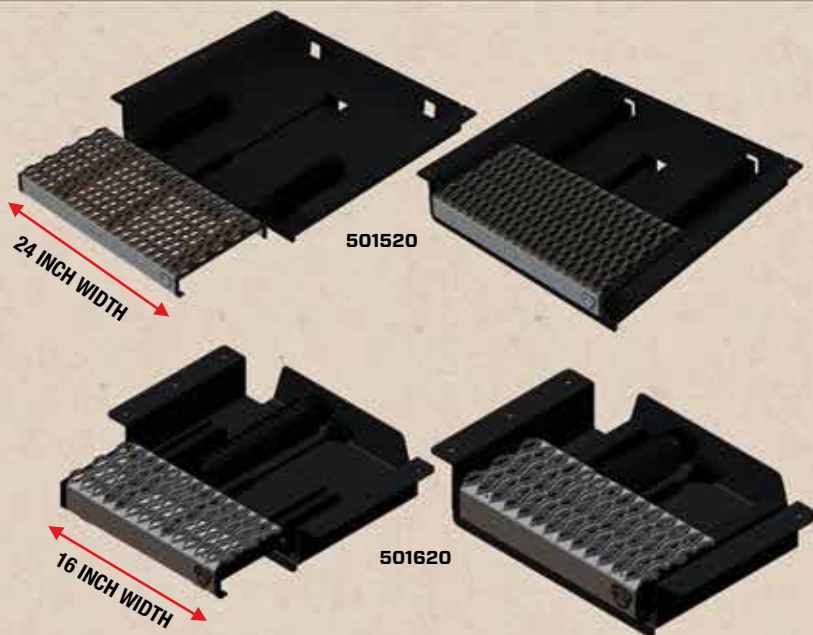

WORK TRUCK STEP APPLICATIONS

	GALVANIZED	XP7 YLW
WTS 24" GSS (Grip Strut Step)	*501020	*501027
WTS 12" GSS (Grip Strut Step)	*501030	*501037
WTS 16" GSS (Grip Strut Step)	*501620	*501627
WTS 24" Deployable Platform Step (Grip Strut)	*501520	*501527
WTS 31" Deployable Platform Step (Grip Strut)	*501060	*501067

*NOTE: These steps fit any flat surface with access to the other side.

■ CARGO VAN STEP

This hands-free deployable step gives you maximum safety and accessibility when entering and exiting the side door of your van. Reduces a van's step height by at least 7 inches.

HEAVY-DUTY AND HANDS-FREE

FEATURES

- Hands-free
- Fully assembled
- 500 lb. weight capacity
- Easy to use and install
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on step
- Large 24" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push on step to deploy, push back in again to lock when not in use!



CARGO VAN / Transit Vehicles WORK TRUCK STEP APPLICATIONS

	GALVANIZED	XP7 YLW
'03 - '21 24" WTS - Chevy Cargo Van (Grip Strut) (Side door)	501050	501057
'13 - '21 24" WTS - Ford Transit Van (Grip Strut) (Side door)	501070	501077
'13 - '21 24" WTS - Ford Transit Van (Grip Strut) (Rear door)	501079	501977
'12 - '21 24" WTS - Mercedes Sprinter (Grip Strut) (Side door)	501080	501087
'14 - '21 24" WTS - Dodge Promaster Van (Grip Strut) (Side door)	501090	501097



FACTORY STEP GRAB HANDLES

FACTORY STEP

FEATURES

- Safer entry and exit from your van
- 20" wide fully functional step area
- Made from heavy gauge steel, plated and powder coated for superior protection
- Exclusive perforated step area for solid footing
- Rated at 500 lb. weight capacity
- Super easy installation
- Limited lifetime warranty on materials and craftsmanship



LOAD CAPACITY
✓ HEAVY DUTY
500 LBS




FACTORY STEP APPLICATIONS

XP3 BLACK XP7 YLW

	XP3 BLACK	XP7 YLW
'15 - '21 Ford Transit Vans (Excluding the Connect) - Pair	451001	451007
'10 - '21 Mercedes Sprinter Van - Pair	451011	451017

*NOTE: Excluding the Connect for fitment

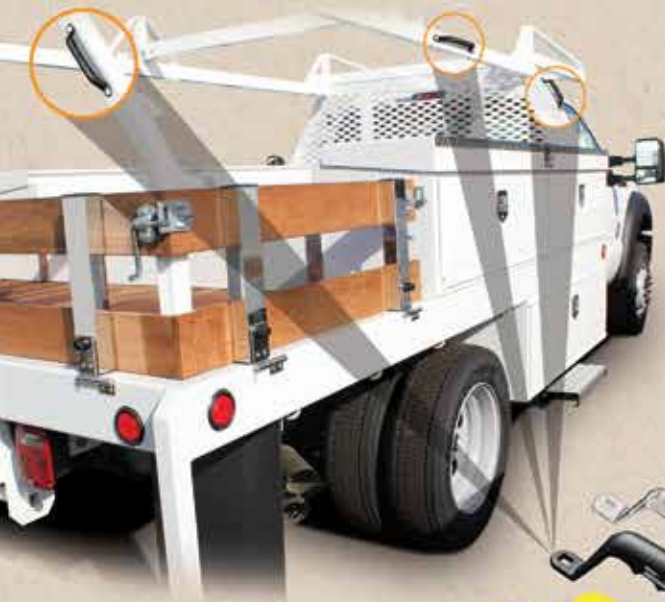

GRAB HANDLES

FEATURES

- Easy bolt-on installation
- Cast from alloyed aluminum
- Powder coated and polished finishes
- Secure grip for added safety



20 Inch



10 Inch

GRAB HANDLE APPLICATIONS	XM3 POLISHED	XP3 BLACK	XP7 YLW
Grab Handle 10"	200032	200031	200037
Grab Handle 20"	200042	200041	200047

HD HITCH STEP



LOAD CAPACITY
✓ HEAVY DUTY
650 LBS

■ HD UNIVERSAL HITCH STEP

FEATURES

- Non-slip surface
- Requires standard pin and clip
- Folds up when not in use
- Provides easy access to back of vehicle
- Fits all 2" hitch receivers



GRAPHICS FOR HD UNIVERSAL HITCH STEPS



HD UNIVERSAL HITCH STEPS APPLICATIONS (SOLD AS SINGLES)

XP3 BLACK

Universal Hitch Step - Blank	183012
Universal Hitch Step - USA	183022
Universal Hitch Step - American Flag	183032
Universal Hitch Step - Horse	183042
Universal Hitch Step - MY TOY	183052
Universal Hitch Step - CARR logo	183062
Universal Hitch Step - Checkered Flags	183082
Universal Hitch Step - U.S. Marines	183142
Universal Hitch Step - Dirt Bike	183152
Universal Hitch Step - Quad	183162
Universal Hitch Step - Pick-up	183172
Universal Hitch Step - Jeep	183182
Universal Hitch Step - SUV	183192
Universal Hitch Step - U.S. Coast Guard	183202
Universal Hitch Step - Fire & Rescue	183212
Universal Hitch Step - Law Enforcement	183222
Universal Hitch Step - U.S. National Guard	183232
Universal Hitch Step - Reflector	183242
Universal Hitch Step - Black Out (All Black)	183252




MEGA STEP HD MEGA STEP



MEGA STEP

FEATURES

- Heavy-duty foldable steps are large—14" by 6"
- Specifically developed for all 2" and 2-1/2" hitch receivers
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a trailer hitch
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty

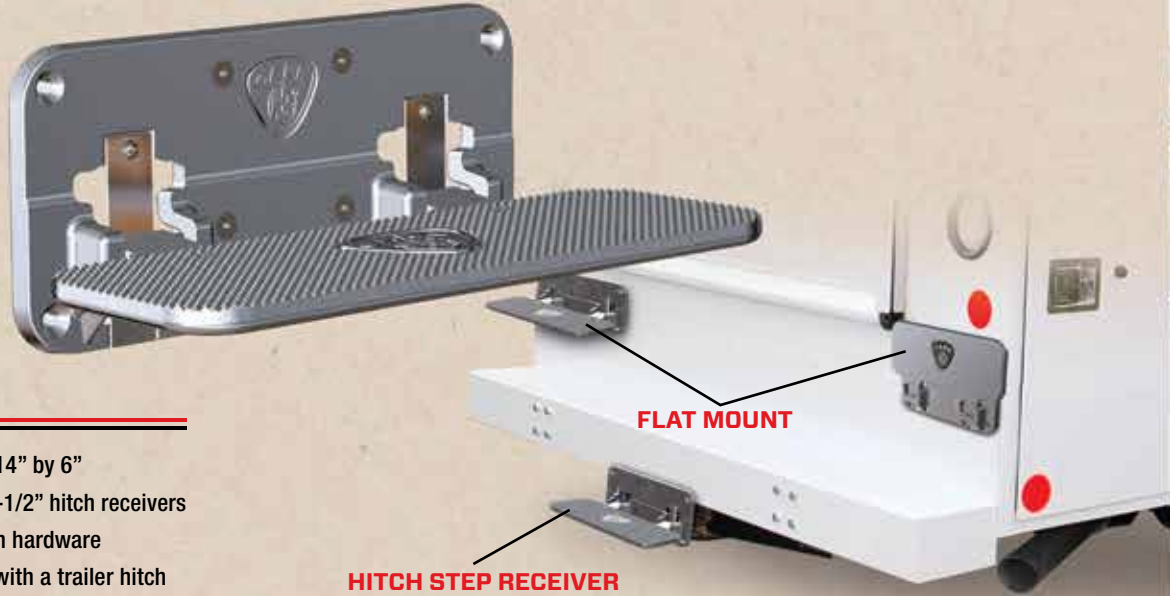

MEGA STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM4 MATTE	XP7 YLW
Mega Step Flat Mount	190001	190005	190007
Mega Hitch Step 2 and 2 1/2" receivers	190011	190015	190017

HD MEGA STEP



FEATURES

- Heavy-duty foldable steps are large—14" by 8"
- Illuminated with grab handle slots
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a 2" or 2-1/2" hitch receivers
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty
- NFPA Compliant



LOAD CAPACITY
✓ **HEAVY DUTY**
500 LBS

HD MEGA STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM3 POLISHED	XP7 YLW
HD Mega Step Flat Mount - with LED light	193001	193002	193007
HD Mega Hitch Step 2 and 2 1/2" receivers - with LED light	193011	193012	193017
HD Mega Step Retro Fit (Fire Trucks only) - with LED light	-	193022	-
HD Mega Step Flat Mount - no light	194001	194002	194007
HD Mega Hitch Step 2 and 2 1/2" receivers - no light	194011	194012	194017



JL 180° LIGHT MOUNT LIGHT WINGS



Use the JL 180° to easily adjust additional vehicle lighting without tools or hassle. Lights on each side together provide 360 coverage for off-road, camping, and recreational use.

■ JL 180° LIGHT MOUNT

The JL 180° Light Mount is designed for effortless 180° light rotation on the driver and passenger side of a JL Wrangler. It securely mounts to the A-Pillar factory holes and can accommodate 3" lights. Featuring a simple pull pin design, the JL 180° Light Mount has 7 different rotation positions—perfect for on-the-fly adjustments.

FEATURES

- Durable powder coat for corrosion protection and rugged use
- Easily adjustable 180° rotating feature
- Precise fit using factory holes
- Antenna cutout
- Super easy install
- Solid mount with virtually no vibration
- Accommodates 3" lights

JEEP JL 180 LIGHT MOUNT APPLICATIONS XP3 BLACK

18 - '21	JL Wrangler All Styles	210291
'20 - '21	JT Gladiator All Styles	210291

■ LIGHT WING



The CARR Light Wing mounts to virtually any bumper with a solid mounting area for the vehicle license plate. The Light Wing is extremely universal, and most vehicles do not require a mounting kit. Its unique style accents your vehicle's appearance. The durable cast aluminum alloy is available in black powder coat.

FEATURES

LIGHTS NOT INCLUDED

- 36" wing span
- Universal design that can easily mount to virtually any bumper that has a solid mounting area for the vehicle license plate
- Wing swept design contours to today's trucks and SUVs
- Will fit urethane bumpers as long as there is a metal sub-structure behind the urethane cover
- Strong die-cast construction
- Solid mount with virtually no vibration
- Special keyed security bolt to protect your investment
- Affordable alternative to expensive grille guards

BLACK
CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

LIGHT WING APPLICATIONS

XP3 BLACK

LIGHT WING	167301
------------	--------



XRS JEEP ROTA LIGHT BAR LIGHT BARS

■ XRS JEEP ROTA LIGHT BARS

FEATURES

- Absolutely no drilling or cutting
- Bar rotates down for additional clearance
- Mounts to existing factory holes



WILL ACCOMMODATE LED LIGHTS

LIGHTS NOT INCLUDED



JK Jeep Wrangler All Styles

2007-2018 PART # 210221

TJ Jeep Wrangler

1997-2006 PART # 210661

CJ7/YJ Jeep Wrangler

1976-1995 PART # 210881

■ DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

Available in two finishes. The XM3 bars feature a stainless steel crossbar. The XP3 bar feature a powder coated crossbar. All light bars are designed to securely mount to the roof gutter of vehicles with internal gutters, and can be installed with our gutter mount kit. All CARR light bars come with special bolts that are keyed to protect your investment.



LIGHTS NOT INCLUDED

ALL OF OUR LIGHT BARS WILL ACCOMMODATE LED AND RALLY LIGHTS



DELUXE LIGHT BAR

FEATURES

- Wide cast aluminum mounting base
- Universal fit



DELUXE ROTA LIGHT BAR

FEATURES

- A CARR exclusive feature that allows the light bar to rotate down for extra clearance or to protect your lighting investment
- Universal fit



M-PROFILE LIGHT BAR

FEATURES

- Medium profile design looks attractive on any vehicle
- Universal fit

RAIN GUTTER KITS FOR LIGHT BARS PAGES 15 - 20

Our Rain Gutter brackets are now available in stainless steel and black powder coated stainless steel. All of these brackets are uniquely designed to fit your vehicle, and our roof-mounted light bars simply clamp on to these brackets for an easy and secure installation.

LIGHT BARS



DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

CHEVY/GMC	DELUXE LIGHT BAR		DELUXE ROTA BAR		M-PROFILE BAR		RAIN GUTTERS	
	XM3 POL	XP3 BLK	XM3 POL	XP3 BLK	XM3 POL	XP3 BLK	KIT Stainless	KIT XP3 Black
'15 - '21 Colorado/Canyon	210342	210341	210872	210871	210702	210701	220062	220061
'04 - '14 Colorado/Canyon	210342	210341	210872	210871	210702	210701	220052	220051
'02 - '09 Trail Blazer/Envoy	210342	210341	210872	210871	210702	210701	220542	220541
'02 - '13 Avalanche	210342	210341	210872	210871	210702	210701	220542	220541
'02 - '21 Denali Truck	210342	210341	210872	210871	210702	210701	220542	220541
'19 - '21 Sierra/Silverado C&K PU / Fullsize & HD	210342	210341	210872	210871	210702	210701	220062	220061
'14 - '18 Sierra/Silverado C&K PU / Fullsize & HD	210342	210341	210872	210871	210702	210701	220062	220061
'00 - '13 Sierra/Silverado C&K PU / Fullsize & HD	210342	210341	210872	210871	210702	210701	220542	220541
'88 - '99 Sierra/Silverado C&K PU / Fullsize	210342	210341	210872	210871	210702	210701	223412	223411
'14 - '21 Fullsize Crew Cab 1500-3500 (All doors)	210342	210341	210872	210871	210702	210701	220062	220061
'00 - '13 Fullsize Crew Cab	210342	210341	210872	210871	210702	210701	220542	220541
'92 - '99 Fullsize Crew Cab	210342	210341	210872	210871	210702	210701	223412	223411
'73 - '91 Fullsize Crew Cab	210342	210341	210872	210871	210702	210701	NR	NR
'73 - '87 Fullsize Pick-up	210342	210341	210872	210871	210702	210701	NR	NR
'00 - '18 Suburban/Yukon XL Tahoe/Yukon	210342	210341	210872	210871	210702	210701	220542	220541
'92 - '99 Suburban	210342	210341	210872	210871	210702	210701	223412	223411
'76 - '91 Suburban	210342	210341	210872	210871	210702	210701	NR	NR
'92 - '99 Yukon/Tahoe	210342	210341	210872	210871	210702	210701	223412	223411
'76 - '93 S10/Sonoma pickup, Blazer/Jimmy	210342	210341	210872	210871	210702	210701	220042	220041
'67 - '96 Fullsize Van	210342	210341	210872	210871	N/A	N/A	NR	NR
RAM/DODGE								
'19 - '21 Ram 1500 NEW BODY STYLE All Cabs/All Doors	210342	210341	210872	210871	210702	210701	220062	220061
'19 - '21 Ram 1500 All Cabs/All Doors CLASSIC	210342	210341	210872	210871	210702	210701	220082	220081
'19 - '21 Ram 2500-5500 All Cabs/All Doors	210342	210341	210872	210871	210702	210701	220082	220081
'14 - '18 Ram 1500-5500 All Cabs/All Doors	210342	210341	210872	210871	210702	210701	220082	220081
'09 - '13 Ram 1500 All Cabs/All Doors	210342	210341	210872	210871	210702	210701	220062	220061
'02 - '08 Ram 1500 All Cabs/All Doors	210342	210341	210872	210871	210702	210701	220542	220541
'94 - '01 Ram 1500 Pickups All Cabs/All Doors	210342	210341	210872	210871	210702	210701	221502	221501
'03 - '13 Ram 2500-5500 All Cabs/All Doors	210342	210341	210872	210871	210702	210701	220062	220061
'94 - '02 Ram 2500-5500 All Cabs/All Doors	210342	210341	210872	210871	210702	210701	221502	221501
'74 - '93 Fullsize Pickup	210342	210341	210872	210871	N/A	N/A	NR	NR
'05 - '09 Durango	210342	210341	210872	210871	210702	210701	220542	220541
'05 - '11 Dakota	210342	210341	210872	210871	210702	210701	220542	220541
'97 - '04 Dakota	210342	210341	210872	210871	210702	210701	220052	220051
'74 - '92 Ram Charger	210342	210341	210872	210871	N/A	N/A	NR	NR
'83 - '91 Raider	210342	210341	210872	210871	210702	210701	NR	NR
FORD/MERCURY								
'99 - '16 Super Duty All Cabs	210342	210341	210872	210871	210702	210701	220052	220051
'19 - '21 Ranger - All Styles	210342	210341	210872	210871	210702	210701	220062	220061
'04 - '14 F-150	210342	210341	210872	210871	N/A	N/A	220062	220061
'81 - '96 F150 & 250 Light Duty/Pickup/Bronco	210342	210341	210872	210871	N/A	N/A	NR	NR
'81 - '98 F250-550 Heavy Duty Pickup	210342	210341	210872	210871	N/A	N/A	NR	NR
'67 - '80 Fullsize Pick-up/Bronco	210342	210341	210872	210871	N/A	N/A	NR	NR
'00 - '05 Excursion	210342	210341	210872	210871	210702	210701	220052	220051
'91 - '01 Explorer (not Eddie Bauer)	210342	210341	210872	210871	210702	210701	222742	222741
'96 - '01 Mercury Mountaineer (Same as Explorer)	210342	210341	210872	210871	210702	210701	222742	222741
'95 - '96 F150 Lightning	210342	210341	210872	210871	210702	210701	NR	NR
'75½ - '02 Fullsize E-Series Van	210342	210341	210872	210871	210702	210701	NR	NR
'05 - '14 Fullsize E-Series Van	210342	210341	210872	210871	210702	210701	NR	NR

NOTE: Vehicles not listed have no applications



LIGHT BARS

DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

	DELUXE LIGHT BAR		DELUXE ROTA BAR		M-PROFILE BAR		RAIN GUTTERS	
	XM3 POL	XP3 BLK	XM3 POL	XP3 BLK	XM3 POL	XP3 BLK	KIT Stainless	KIT XP3 Black
ISUZU								
'84 - '02 Trooper	210342	210341	210872	210871	210702	210701	220042	220041
'91 - '02 Rodeo	210342	210341	210872	210871	210702	210701	220052	220051
'91 - '02 Amigo	210342	210341	210872	210871	210702	210701	220052	220051
'89 - '93 Pick-up	210342	210341	210872	210871	210702	210701	NR	NR
JEEP								
'05 - '21 Grand Cherokee	210342	210341	210872	210871	210702	210701	220052	220051
'93 - '98 Grand Cherokee	210342	210341	210872	210871	210702	210701	223412	223411
'06 - '10 Commander	210342	210341	210872	210871	210702	210701	220052	220051
'84 - '00 Cherokee	210342	210341	210872	210871	210702	210701	NR	NR
MAZDA								
'91 - '94 Navajo	210342	210341	210872	210871	210702	210701	222742	222741
'83 - '93 B-Series Pick-up	210342	210341	210872	210871	210702	210701	220052	220051
MINI								
'78 - '94 Pick-up	210342	210341	210872	210871	210702	210701	NR	NR
'83 - '99 Montero	210342	210341	210872	210871	210702	210701	NR	NR
'97 - '02 Montero Sport	210342	210341	210872	210871	210702	210701	220042	220041
NISSAN								
'98 - '01 Frontier Reg cab	210342	210341	210872	210871	210702	210701	220052	220051
'02 - '21 Frontier Crew Cab	210342	210341	210872	210871	210702	210701	220062	220061
'00 - '16 Xterra - Without option roof rack	210342	210341	210872	210871	210702	210701	220062	220061
'04 - '11 Pathfinder	210342	210341	210872	210871	210702	210701	220062	220061
'86 - '97 Hardbody P/U	210342	210341	210872	210871	210702	210701	220052	220051
'72 - '86 Pick-up	210342	210341	210872	210871	210702	210701	NR	NR
TOYOTA								
'05 - '21 Tacoma/Prerunner/Crew Cab	210342	210341	210872	210871	210702	210701	220042	220041
'96 - '04 Tacoma/Prerunner/Crew Cab	210342	210341	210872	210871	210702	210701	220052	220051
'07 - '21 Tundra	210342	210341	210872	210871	210702	210701	220042	220041
'00 - '06 Tundra	210342	210341	210872	210871	210702	210701	220052	220051
'01 - '07 Sequoia	210342	210341	210872	210871	210702	210701	220052	220051
'89 - '95 Pick-up	210342	210341	210872	210871	210702	210701	220052	220051
'74 - '88 Pick-up	210342	210341	210872	210871	210702	210701	NR	NR
'05 - '07 4 Runner	210342	210341	210872	210871	210702	210701	220042	220041
'96 - '04 4 Runner	210342	210341	210872	210871	210702	210701	220052	220051
'84 - '95 4 Runner	210342	210341	210872	210871	210702	210701	220052	220051
'93 - '99 T-100	210342	210341	210872	210871	210702	210701	220052	220051
'80 - '91½ FJ60/FJ62 L/C	210342	210341	210872	210871	210702	210701	NR	NR
'07 - '14 FJ Cruiser	210342	210341	210872	210871	210702	210701	220042	220041

NOTE: Vehicles not listed have no applications



LIGHTS NOT INCLUDED

■ LOW PROFILE & C-PROFILE ROTA LIGHT BARS

Available in two finishes, the XM3 bars feature a stainless steel crossbar. The XP3 bar features a powder coated crossbar. All light bars are designed to securely mount to the roof gutter of many vehicles with internal gutters, and can be installed with our gutter mount kit. All CARR light bars come with special bolts that are keyed to protect your investment.

ALL OF OUR LIGHT BARS WILL ACCOMMODATE LED AND RALLY LIGHTS



LOW PROFILE LIGHT BAR

FEATURES

- Low profile design gives your truck a subtle appearance



C-PROFILE ROTA LIGHT BAR

FEATURES

- Universal fit
- Cast end brackets made of heavy gauge steel
- Easy installation
- Crossbar rotates 180 degrees
- Stylish with rugged durability



LIGHT BARS

LOW PROFILE, C-PROFILE ROTA LIGHT BARS

CHEVY/GMC	LOW PROFILE		C-PROFILE ROTA BAR		RAIN GUTTERS	
	XP3 BLACK	XM3 POL	XP3 BLACK	STAINLESS	XP3 BLACK	
'15 - '21 Colorado/Canyon	210501	210112	210111	220062	220061	
'04 - '14 Colorado/Canyon	210501	210112	210111	220052	220051	
'02 - '09 Trail Blazer/Envoy	210501	210112	210111	220542	220541	
'02 - '13 Avalanche	210501	210112	210111	220542	220541	
'02 - '21 Denali Truck	210501	210112	210111	220542	220541	
'19 - '21 Sierra/Silverado C&K PU / Fullsize & HD	210501	210112	210111	220062	220061	
'14 - '18 Sierra/Silverado C&K PU / Fullsize & HD	210501	210112	210111	220062	220061	
'00 - '13 Sierra/Silverado C&K PU / Fullsize & HD	210501	210112	210111	220542	220541	
'88 - '99 Sierra/Silverado C&K PU / Fullsize	210501	210112	210111	223412	223411	
'14 - '21 Fullsize Crew Cab 1500-3500 (All doors)	N/A	210112	210111	220062	220061	
'00 - '13 Fullsize Crew Cab	210501	210112	210111	220542	220541	
'92 - '99 Fullsize Crew Cab	N/A	210112	210111	223412	223411	
'73 - '91 Fullsize Crew Cab	N/A	210112	210111	NR	NR	
'73 - '87 Fullsize Pick-up	N/A	210112	210111	NR	NR	
'00 - '18 Suburban/Yukon XL Tahoe/Yukon	N/A	210112	210111	220542	220541	
'92 - '99 Suburban	N/A	210112	210111	223412	223411	
'76 - '91 Suburban	N/A	210112	210111	NR	NR	
'92 - '99 Yukon/Tahoe	N/A	210112	210111	223412	223411	
'76 - '93 S10/Sonoma pickup, Blazer/Jimmy	N/A	210112	210111	220042	220041	
'67 - '96 Fullsize Van	N/A	210112	210111	NR	NR	
DODGE						
'19 - '21 Ram 1500 NEW BODY STYLE All Cabs/All Doors	N/A	210112	210111	220062	220061	
'19 - '21 Ram 1500 All Cabs/All Doors CLASSIC	N/A	210112	210111	220082	220081	
'19 - '21 Ram 2500-5500 All Cabs/All Doors	N/A	210112	210111	220082	220081	
'14 - '18 Ram 1500-5500 All Cabs/All Doors	N/A	210112	210111	220082	220081	
'09 - '13 Ram 1500 All Cabs/All Doors	N/A	210112	210111	220062	220061	
'02 - '08 Ram 1500 All Cabs/All Doors	210501	210112	210111	220542	220541	
'94 - '01 Ram 1500 Pickups All Cabs/All Doors	210501	210112	210111	221502	221501	
'03 - '13 Ram 2500-5500 All Cabs/All Doors	N/A	210112	210111	220062	220061	
'94 - '02 Ram 2500-5500 All Cabs/All Doors	N/A	210112	210111	221502	221501	
'74 - '93 Fullsize Pickup	N/A	210112	210111	NR	NR	
'05 - '09 Durango	N/A	210112	210111	220542	220541	
'05 - '11 Dakota	N/A	210112	210111	220542	220541	
'97 - '04 Dakota	210501	210112	210111	220052	220051	
'74 - '92 Ram Charger	N/A	210112	210111	NR	NR	
'83 - '91 Raider	N/A	210112	210111	NR	NR	
FORD/MERCURY						
'99 - '16 Super Duty All Cabs	N/A	210112	210111	220052	220051	
'19 - '21 Ranger - All Styles	210501	210112	210111	220062	220061	
'04 - '14 F-150	N/A	210112	210111	220062	220061	
'81 - '96 F150 & 250 Light Duty/Pickup/Bronco	N/A	210112	210111	NR	NR	
'81 - '98 F250-550 Heavy Duty Pickup	N/A	210112	210111	NR	NR	
'67 - '80 Fullsize Pick-up/Bronco	N/A	210112	210111	NR	NR	
'00 - '05 Excursion	N/A	210112	210111	220052	220051	
'91 - '01 Explorer (not Eddie Bauer)	N/A	210112	210111	222742	222741	
'96 - '01 Mercury Mountaineer (Same as Explorer)	N/A	210112	210111	222742	222741	
'95 - '96 F150 Lightning	N/A	210112	210111	NR	NR	
'75½ - '02 Fullsize E-Series Van	N/A	210112	210111	NR	NR	
'05 - '14 Fullsize E-Series Van	N/A	210112	210111	NR	NR	

NOTE: Vehicles not listed have no applications

LIGHT BARS




■ LOW PROFILE, C-PROFILE ROTA LIGHT BARS

	LOW PROFILE	C-PROFILE ROTA BAR		RAIN GUTTER KIT	
	XP3 BLACK	XM3 POL	XP3 BLACK	STAINLESS	XP3 BLACK
ISUZU					
'84 - '02 Trooper	N/A	210112	210111	220042	220041
'91 - '02 Rodeo	N/A	210112	210111	220052	220051
'91 - '02 Amigo	N/A	210112	210111	220052	220051
'89 - '93 Pick-up	N/A	210112	210111	NR	NR
JEEP					
'05 - '21 Grand Cherokee	210501	210112	210111	220052	220051
'93 - '98 Grand Cherokee	N/A	210112	210111	223412	223411
'06 - '10 Commander	210501	210112	210111	220052	220051
'84 - '00 Cherokee	N/A	210112	210111	NR	NR
MAZDA					
'91 - '94 Navajo	N/A	210112	210111	222742	222741
'83 - '93 B-Series Pick-up	210501	210112	210111	220052	220051
MITSUBISHI					
'78 - '94 Pick-up	N/A	210112	210111	NR	NR
'83 - '99 Montero	N/A	210112	210111	NR	NR
'97 - '02 Montero Sport	N/A	210112	210111	220042	220041
NISSAN					
'98 - '01 Frontier Reg cab	210501	210112	210111	220052	220051
'02 - '21 Frontier Crew Cab	210501	210112	210111	220062	220061
'00 - '16 Xterra - Without option roof rack	210501	210112	210111	220062	220061
'04 - '11 Pathfinder	N/A	210112	210111	220062	220061
'86 - '97 Hardbody P/U	N/A	210112	210111	220052	220051
'72 - '86 Pick-up	N/A	210112	210111	NR	NR
TOYOTA					
'05 - '21 Tacoma/Prerunner/Crew Cab	N/A	210112	210111	220042	220041
'96 - '04 Tacoma/Prerunner/Crew Cab	210501	210112	210111	220052	220051
'07 - '21 Tundra	N/A	210112	210111	220042	220041
'00 - '06 Tundra	210501	210112	210111	220052	220051
'01 - '07 Sequoia	210501	210112	210111	220052	220051
'89 - '95 Pick-up	N/A	210112	210111	220052	220051
'74 - '88 Pick-up	N/A	210112	210111	NR	NR
'05 - '07 4 Runner	210501	210112	210111	220042	220041
'96 - '04 4 Runner	210501	210112	210111	220052	220051
'84 - '95 4 Runner	N/A	210112	210111	220052	220051
'93 - '99 T-100	N/A	210112	210111	220052	220051
'80 - '91½ FJ60/FJ62 L/C	N/A	210112	210111	NR	NR
'07 - '14 FJ Cruiser	N/A	210112	210111	220042	220041

NOTE: Vehicles not listed have no applications



■ Steps and Grab Handles Available in Safety Yellow

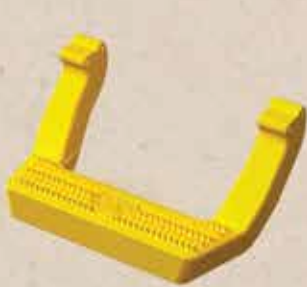

LD STEP
Additional 1" Depth Step Area
14" Width



HOOP II
10" Width



SUPER HOOP
20" Width



MEGA STEP
14X6 Folding Step
(Flat Mount and Hitch Step)



HD MEGA STEP
14X6 Folding Step with Built-in
Grab Handle/Optional Lighting
(Flat Mount and Hitch Step)




FACTORY VAN STEP
20" Width



20" GRAB HANDLE

10" GRAB HANDLE

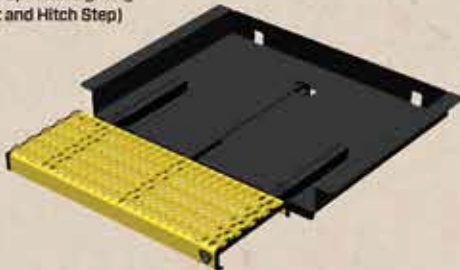

**31" DEPLOYABLE
PLATFORM STEP**



**24" DEPLOYABLE
PLATFORM STEP**



**24" DEPLOYABLE
WORK TRUCK STEP**



**16" DEPLOYABLE
WORK TRUCK STEP**




**12" DEPLOYABLE
WORK TRUCK STEP**

FIRE/ EMERGENCY
LIMITED LIFETIME WARRANTY



■ **EMERGENCY VEHICLES**

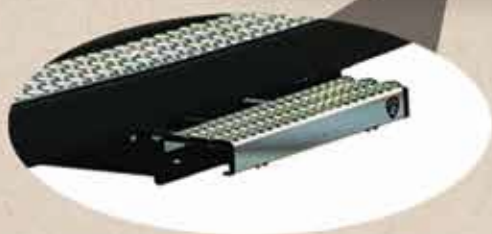

31" DEPLOYABLE PLATFORM STEP

LIMITED LIFETIME WARRANTY

CARR offers a Limited Lifetime Warranty against manufacturer defects on the structural integrity and finish on the CARR product.

All warranties start from the consumer's date of purchase. Consumer must take the product to a CARR dealer for inspection and processing. Dealers are to return warranty items to their CARR distributor for replacement or credit. CARR reserves the right to approve or deny a warranty claim if it is determined that the product has been damaged due to abuse.

TERMS AND CONDITIONS

Please visit Carr.com or contact our customer service for more information



WWW.CARR.COM

SALES@CARR.COM | 800-800-1084